




CE-500 Series: Do you need FIX or PORTABLE configuration?

March 2011


FIX configuration

 - CE500 with RAM mount, **no** cradle
- CE500 back panel screwed to RAM mount
- Constant vehicle battery connection required
 - Battery can be installed for backup





CE507 FIX configuration

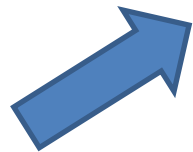


CE504 FIX configuration

PORTABLE configuration

- CE500, **Cradle** and RAM mount
- Cradle screwed to RAM mount
- CE500 is easily placed in/pulled-out of Cradle
- Vehicle power connected to Cradle
- Power to CE500 from internal battery/Cradle
- **Cradle supports both CE504 and CE507**



CE500 Cradle (Basic \ Enhanced)

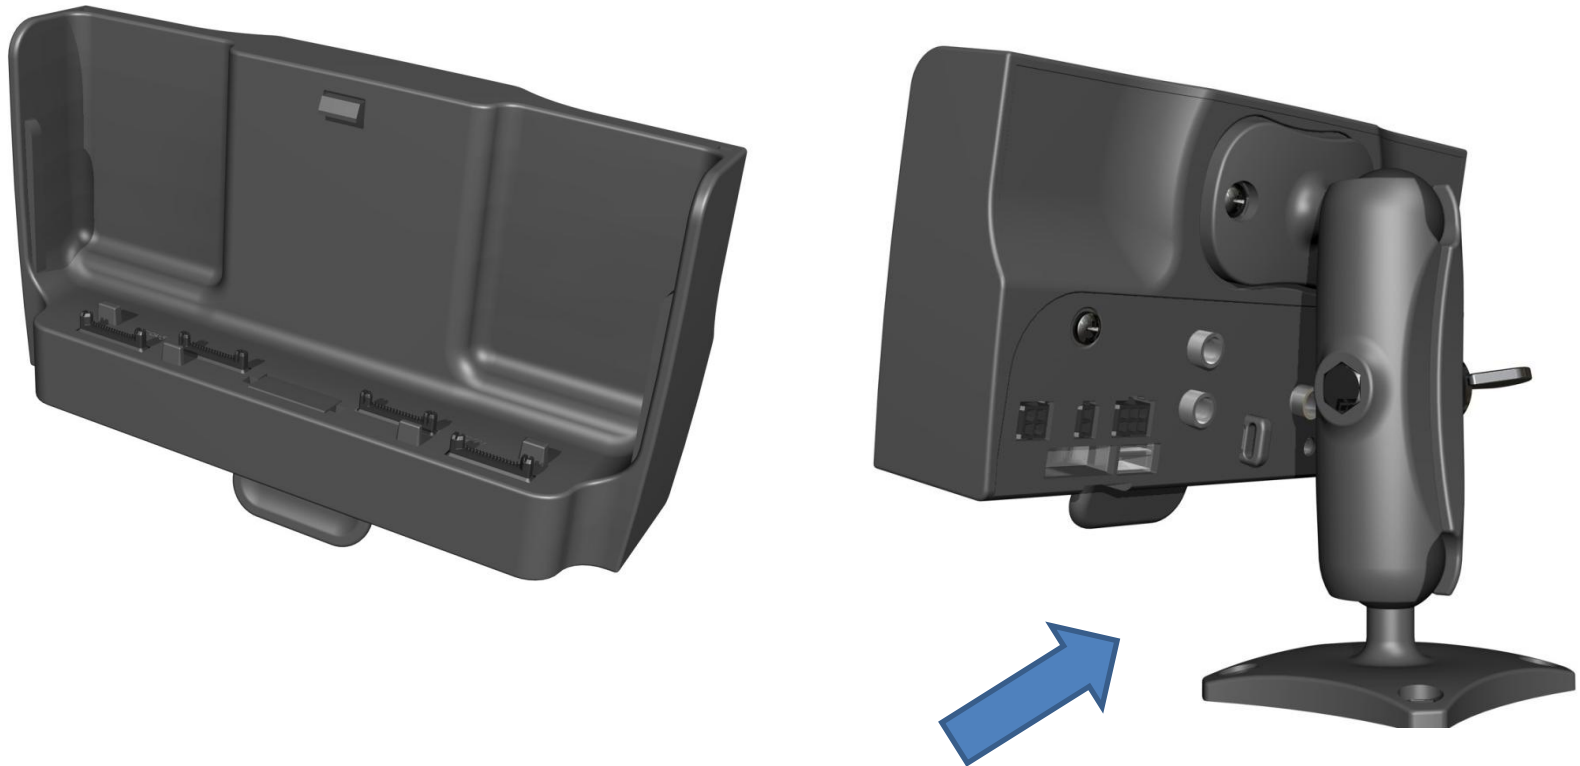

Cradle with RAM mount

CE504 with Cradle and mount



Confidential - Preliminary information

Easily placed in Cradle or pulled out

